

QUICK START GUIDE Smoke Purifier



Always read the instructions before you start.

ENGRAVING **HAPPINESS**

Thanks for choosing AlgoLaser!

We are so glad that you give it a home.

We have packed everything into the neatest form, utilizing laser engraving machines, to help you enjoy engraving, achieve the greatest yield, and realize your dream.

Justin Tan

The Founder of AlgoLaser

Aftersale Policy	Aftersale Support				
• 12-Months Limited Warranty We provide 12 months warranty for every product from the date of purchase against defects in materials and workmanship. And we will offer repair or replacement service according to the product condition. Please note that this warranty does not cover damaged product caused by misuse or abuse.	Please go to http://algolaser.com/support/ to submit your inquiry. To help engineer make faster judgment and provide effective solutions, please provide related pictures and videos within the inquiry.				
Return or Exchange Policy For detailed policy, please refer to the return and exchange policy on the platform you purchased from.	2 Information needed:				
Misdelivery & Missing Parts	Machine Model Laser Module Purchase Channel				
If you receive an incorrect product or discover missing parts after receiving the product, please contact our customer service. AlgoLaser will cover the shipping cost of the incorrect product or send the replacement parts.	Delivery Date Computer System Software Problem Description, Video & Photo				
Troubleshooting Support					
AlgoLaser offers online troubleshooting guides that helps you to solve problems step-by-step. Please reach algolaser.com to get tutorial videos, FAQs, and tech support from professional engineers.	After submmitting, our engineer will reply you within 24 hours.				

CONTENTS

01 Before You Start

1.1 Overview of Product	1
1.2 Parts List	2

02 Machine Assembly------4

03 **How to Use**

3.1 Check before Using	12
3.2 Use Instruction	12
3.3 Power Button	13
3.4 Replace Filter Part	13
3.5 FAQ	15
3.6 Safety Precaution	16

01 Before You Start

1.1 Overview of Products

The Smoke Purifier is mainly used for the users to purify the air from smoke, dust, toxic and harmful gases and odours, and is suitable for laser engraving, welding, printing, medical and other application scenarios. It features a three-stage filter system design (including cotton pre-filter, medium-sized HEPA filter and main activated carbon filter), 150W high-power motor provides 258m³/h strong airflow and suction, and the purification efficiency is up to 99.97%, which effectively improves the air quality and environmental comfort, allowing you and your family members to enjoy a healthy and comfortable creative experience.

Specification						
Product Modle:	ALSP1.0					
Maximum Power	150W					
Filtration Efficiency	0.3µm 99.97%					
Sound Power	68±3dB					
System Flow Rate	258m³/h					
Intake Connection	φ75mm Flange					
Input	□ AC120V □ AC220-240V					
Size	L245*W245*H375mm					
Weight	7.45Kg					

1.2 Parts List

Please check carefully to ensure that the packing list below are all included. If any item is missing or damaged, please contact the after-sales service.



- ①Main Machine * 1
- 2Wheel * 4
- ③Primary Filter Cotton * 1
- Medium-efficiency Filter * 1
- **5**High Efficiency Filter * 1

- Clamp * 2
 Smoke Pipe Connector*1
 Smoke Pipe * 1
 Power Cable * 1
- OSpare Primary Filter Cotton * 3
- $\textcircled{1} User \ Manual$





Pulling the Press Latch to open the lid of the smoke purifier, and the High Efficiency Filter, Medium-efficiency Filter and Primary Filter Cotton have been pre-installed in order.





Please refer to the installation video in the Smoke Purifier playlist on https://www.youtube.com/@algolaserofficial/playlists.

AlgoLaser Smoke Purifier 4



Fit Smoke Pipe Connector



Straighten the Smoke Pipe (the initial state is folded)



AlgoLaser Smoke Purifier 5

Attach the end of the Smoke Pipe fitted with the clamp to the pipe flange of the machine's cover. Use a screwdriver to tighten the screws on the clamp to complete the installation of the Smoke Pipe.





Attach the clamp to the other end of the Smoke pipe.



Connect the end of the Smoke Pipe fitted with the clamp to the pipe flange on the Smart Enclosure. Use a screwdriver to tighten the screws on the clamp to complete the installation of the Smoke Pipe.



Connect the end of the Smoke Pipe fitted with the clamp to the pipe flange on the Smart Enclosure. Use a screwdriver to tighten the screws on the clamp to complete the installation of the Smoke Pipe.







Number	Function Definition	Instruction	Note
1	Power	controls power on/off	
2	Speed Control Knob	Adjust the air flow volume, the smallest is no air flow	
3	Indicator Light	Green Light The stronger the air flow, the brighter the light; When the air flow is at its minimum, the light will turn off;	

AlgoLaser Smoke Purifier 11

3.1 Check before Using

Before turning on the power for the first time, please ensure the following conditions for safe operation.

- a. The machine should be in good condition;
- b. The power button should be in the OFF position;
- c. Filter elements should be evenly placed;
- d. The cover and case should be securely installed;
- e. The speed control knob should be set to MIN;

3.2 Use Instruction

a. Connect the smoke purifier to a power supply, and check whether the power plug is properly connected. Turn on the power button (Picture 1).



b. Turn the knob clockwise to start the smoke purifier,

and set the airflow as required (Picture 2). It should not be set too high or too low. Excessive airflow will increase power consumption and noise level.

The speed control knob should be set to MIN before starting the machine



c. After processing, turn the knob to shut down the smoke purifier, and then power off the power.

3.3 Power Button

Press the power button on machine's control panel to start the machine, accompanied by the orange light turning on. Press it again to stop the machine, and the orange indicator light on the control panel will turn off.

If the machine remains idle for an extended period, please turn off the main power switch and unplug the power cord.

3.4 Replace Filter Part

The machine uses disposable filter parts. When these parts have a degree of dust accumulation, please replace them in time to ensure a good purification effect of the machine.

a. Primary Filter Cotton

① When more than 70% of its surface is covered by dust and it can't be cleaned, please replace it with a new one.

② Place the Primary Filter on the top. The front side (rough side) faces up (in the direction of the air inlet).



b. Medium-efficiency Filter

① When the dust accumulated on the Medium-efficiency Filter obviously reduces the suction power, please replace it with a new one.

(2) Place the Medium-efficiency Filter as the main filter, with the grip side facing upwards, in the middle position.

	120 C			16206						
	1220162	U SU	1916	167UG	20152					91
	1939年193								31	111
										528
	F8551 865									248
										11.2
						ins.				2743
										1224
NI KU										
	USA IE						833			163
			1531							

c. High Efficiency Filter

① If the filter is unable to remove the smoke odor, please replace it with a new one.

(2) Place the High Efficiency Filter at the bottom of the inside of the machine with the grip side facing upwards.



3.5 FAQ

Question 1: The machine is still working, but the airflow is weak and suction power is very low.

Possible causes: The air inlet is blocked or there are foreign objects in the pipeline. The filter is clogged due to excessive dust accumulation.

Solution: Switch off the power and open the top cover. Check that there is no foreign matter blocking the air intake. Then check that the vent is not locked. If the suction power of the unloaded machine is normal, it means that the filter needs to be replaced.

Question 2: The machine shuts down automatically after just starting. Even if you restart the machine, the same problem will happen again.

Possible causes: The airflow through the machine is blocked, causing the start-up fan current become very high, so that the machine shuts down automatically for self-protection.

Solution: Switch off the power and open the top cover. Check that there is no foreign matter blocking in the air intake. Then turn the speed control knob to the lowest level and restart the machine.

Question 3: The power button is on, but the machine does not run and the power indicator does not light up.

Possible causes: The fuse may be broken.


Solution: The fuse needs to be replaced as follows.



Switch off the power first and open the fuse slot with a screwdriver.



Replace the fuse with a backup one. Insert the fuse into the slot.

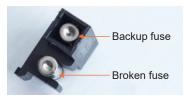

Use a screwdriver to take out the broken fuse.



Fuse replacement is complete.

If the problem is not solved after checking and maintaining, please contact the after-sales service.



3.6 Safety Precaution

Before use, please read and follow the safety precautions listed below to prevent fire and personal injury.

The machine is prohibited to be used in a high temperature environment (above 80°C) or in a flammable, explosive or greasy environment.

The power cable must be grounded. The internal voltage of the machine is up to 310V.

Do not remove or install the filter elements while the machine is in operation. Hands or other objects must not touch the rotating impeller.

The machine's power supply must be within the voltage range indicated in the regulations (according to the power marking on the machine body).

Strictly prohibit the use of too high or too low a voltage than the machine. If the environmental voltage is unstable, please switch off the machine, unplug the power supply, until the power supply is stable and then use it again.

When using the machine, the environmental temperature range of the smoke and dusts intake from the air inlet should be within the atmospheric temperature range with a maximum value of 60° C. Stop using the machine when the temperature is higher or lower than that. At the same time, the humidity of the intake smoke and dust should be between 40% - 80%. If the humidity is too high, the filter elements will quickly fail and the internal circuits will be damaged. Do not use the machine when the humidity is higher than 80%.

The filter must be properly installed before the machine is used. Primary filter cotton is consumable and should be replaced once clogged. (Do not wash and reuse). Please replace it regularly. Do not use the machine without a high efficiency filter or with a poorly performing high efficiency filter.

Strictly prohibit the use of the machine without filter elements, because the direct intake of smoke or dust particles from the machine will damage the fan blower and control system.

Do not continue to use the machine when the filters are clogged. This will shorten the lifespan of the machine and will damage the machine. Please clean and maintain the machine regularly and replace the filter elements regularly to ensure the normal operation of the machine.

If the machine's filter is clogged, the suction power is reduced or the filter elements do not remove odors, do not use the machine by reducing the layers of the machine's filter or by not using a high-efficiency filter or primary cotton.

please do not open the machine for maintenance by yourself. The warranty label on the machine is your only guarantee of after-sales service, so please do not tear or damage it. If the machine is not used in accordance with the instructions, any loss or damage caused is your own responsibility.

Certificate





≻		\sim					
		pplier's Declaration of Conformity					
	Product	Smoke purifier					
\leq	Brand Name	AlgoLaser					
~	Model(s) No.	ALSP1.0					
$\overline{\mathbf{O}}$	Series Model	ALSP2.0. ALSP3.0. ALSP4.0. MM FP01. ALMEC1.0. ARC1.0. ARC2.0. ARC3.0. ARC4.0. ARR1.0. ARR2.0. ARR3.0. ARR4.0					
M	Holder	Shenzhen Algo Technologies Co., Ltd.					
	Address	5th Floor, Building E5, Juyin Technology Industrial Park, Ganli Road, Longgang District, Shenzhen 518116, China					
<u> </u>	Manufacturer	Shenzhen Algo Technologies Co., Ltd.					
0	Address	5th Floor, Building E5, Juyin Technology Industrial Park, Ganli Road, Longgang District, Shenzhen 518116, China					
П С	Rules and Regu	The products electromagnetic emission have been tested to conform to the applicable FDC Rules and Regulations: FCC 47 CFR Part 15: Subpart B					
0	The test result has been evaluated by Flux Compliance Service Laboratory and showed in the test report. (Report No. : FCS2024071/57522) Operation is subject to the following two conditions: (1) This device may not cause harmful interference, (2) This device may accept any interference received, including interference that may cause						
\leq	undesired operation. It is understood that each unit marketed is identical to the device as tested, and any changes to the device that could adversely affect the emission characteristics will require retest.						
2	Without the written approval of Flux Compliance Service Laboratory , this verification is not permitted to be reproduced, except in full, it is not permitted to use the test lab's logo.						
TAT	F	Approved ty: Jack () Jul 17, 2024					
S		Jack WangManagerial					
TTESTATION OF CONFORMITY	does not imply a	s based on a single evaluation of the sample of above mentioned product(s). It an assessment of the whole production. ux Compliance Service Laboratory					
4	-	Tel: 0769-27280901 http://www.fcs-lab.com					

AlgoLaser Smoke Purifier 17



Follow us! #AlgoLaser



AlgoLaser Official User Group f

X AlgoLaser_Official



AlgoLaser Official



此页不印刷

版本。	/rev.		修订内容/Revision No	te	日;	朝/Dat	e 确认人/ Check Bv
比例 SCALE 版本 REV.	1:1 A1	単位 UNIT 毫米 mm	深圳奥菲	宦诺利	技有限	夏公	
核准 APR.		图号 Drawing ND.	ASP-J-01	材料 Material.	封面 200g铜版纸 内页 80g铜版纸	尺寸	160*225mm
审核 CHK.		<mark>品名</mark> P/N.	烟雾净化器 软管 说明书	装订方式 ST.	骑马钉	页次 Page.	24
绘图 DRAWN.	曾玲玲	机型 Model.	烟雾净化器	<mark>物料编码:</mark> Part N日		日期 Date.	2024. 10. 25